

How to Read

It is important to become familiar with the information available from the meter. To identify this information the following icons and displays are helpful.

Table 2 Icons and Displays



Light Sensor, recessed under the small hole near the center of the faceplate of the E-Coder)R900i, supplies the power for the LCD panel (light activated).



Flow/Leak Indicator shows the direction of flow through the meter:

ON	Water in use
OFF	Water not in use.
Flashing	Water is running slowly/low flow indication.



Leak indicator displays a possible leak:

OFF	No leak indicated.
Flashing	Intermittent leak indicated. Water used during at least 1/2 of the 15-minute intervals in the last 24 hours (96 15-minute intervals in a 24-hour period).
Continuous ON	Continuous leak indicated. Water used during all 15-minute intervals in the last 24 hours.



Nine-digit LCD displays the meter reading in billing units of measure.

<p>→ Last three digits</p> <p>→ Fifth and sixth reading digits</p> <p>→ First four digits</p>	<p>Testing units used for meter testing.</p> <p>Reading units.</p> <p>Typical billing digits.</p>
--	---